

FURUNO

OPERATOR'S MANUAL

LOUD HAILER

	LH-3000
Model	LH-3000CG

IMPORTANT NOTICES

General

- This manual has been authored with simplified grammar, to meet the needs of international users.
- The operator of this equipment must read and follow the descriptions in this manual. Wrong operation or maintenance can cancel the warranty or cause injury.
- Do not copy any part of this manual without written permission from FURUNO.
- If this manual is lost or worn, contact your dealer about replacement.
- The contents of this manual and equipment specifications can change without notice.
- The example screens (or illustrations) shown in this manual can be different from the screens you see on your display. The screens you see depend on your system configuration and equipment settings.
- Save this manual for future reference.
- Any modification of the equipment (including software) by persons not authorized by FURUNO will cancel the warranty.
- The following concern acts as our importer in Europe, as defined in DECISION No 768/2008/EC.
 - Name: FURUNO EUROPE B.V.
 - Address: Ridderhaven 19B, 2984 BT Ridderkerk, The Netherlands
- All brand and product names are trademarks, registered trademarks or service marks of their respective holders.

How to discard this product


Discard this product according to local regulations for the disposal of industrial waste. For disposal in the USA, see the homepage of the Electronics Industries Alliance (<http://www.eiae.org/>) for the correct method of disposal.

How to discard a used battery

Some FURUNO products have a battery(ies). To see if your product has a battery, see the chapter on Maintenance. Follow the instructions below if a battery is used. Tape the + and - terminals of battery before disposal to prevent fire, heat generation caused by short circuit.


In the European Union

The crossed-out trash can symbol indicates that all types of batteries must not be discarded in standard trash, or at a trash site. Take the used batteries to a battery collection site according to your national legislation and the Batteries Directive 2006/66/EU.

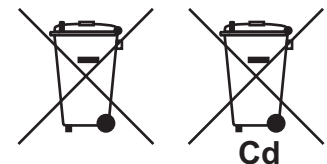

In the USA

The Mobius loop symbol (three chasing arrows) indicates that Ni-Cd and lead-acid rechargeable batteries must be recycled. Take the used batteries to a battery collection site according to local laws.

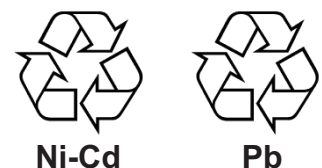

In the other countries

There are no international standards for the battery recycle symbol. The number of symbols can increase when the other countries make their own recycling symbols in the future.



SAFETY INSTRUCTIONS



WARNING

Do not open the equipment.

Only qualified personnel should work inside the equipment.

Do not disassemble or modify the equipment.

Fire, electrical shock or serious injury can result.

Do not place liquid-filled containers on the top of the equipment.

Fire or electrical shock can result if a liquid spills into the equipment.

Immediately turn off the power at the switchboard if the equipment is emitting smoke or fire.

Continued use of the equipment can cause fatal damage to the equipment. Contact a FURUNO agent for service.

Make sure no rain or water splash leaks into the equipment.

Fire or electrical shock can result if water leaks in the equipment.

Keep heater away from equipment.

A heater can melt the equipment's power cord, which can cause fire or electrical shock.

Use the proper fuse.

Use of a wrong fuse can result in damage to the equipment.



CAUTION

Do not use the equipment for other than its intended purpose.

Use of the equipment for other than its intended purpose may result in damage to the equipment or cause bodily injury.

Observe the following compass safe distances to prevent interference to a magnetic compass:

	Standard compass	Steering compass
LH-3000	1.55 m	1.00 m
LH-3010	2.15 m	1.40 m

TABLE OF CONTENTS

- FOREWORD iv**
- SYSTEM CONFIGURATION..... v**
- EQUIPMENT LIST..... vi**

- 1. INSTALLATION 1**
 - 1.1 Mounting the Loud Hailer1
 - 1.2 Intercom Speaker (option)3
 - 1.3 Wiring4

- 2. OPERATIONAL OVERVIEW..... 9**
 - 2.1 Controls9
 - 2.2 Turning the Power On/Off.....10
 - 2.3 Adjusting Key Backlighting11
 - 2.4 Adjusting Output Level11
 - 2.5 Adjusting Listening Volume11
 - 2.6 Calling All Intercom Stations11
 - 2.7 Calling a Specific Intercom Station12
 - 2.8 Receiving a Call from an Intercom Station12
 - 2.9 Hailing by Voice13
 - 2.10 Sounding Warning Signals14
 - 2.11 Transmitting the Auxiliary Signal18
 - 2.12 Alarm Mode18
 - 2.13 Siren Mode (LH-3000-CG)20

- 3. MAINTENANCE, TROUBLESHOOTING..... 21**
 - 3.1 Preventive Maintenance21
 - 3.2 Replacing the Fuse22
 - 3.3 Troubleshooting22

- SPECIFICATIONS..... SP-1**

- PACKING LIST..... A-1**
- OUTLINE DRAWINGS D-1**
- INTERCONNECTION DIAGRAMS-1**

FOREWORD

A Word to the Owner of the LH-3000, LH-3000-CG

Congratulations on your choice of the FURUNO Loud Hailer LH-3000, LH-3000-CG. We are confident you will see why FURUNO has become synonymous with quality and reliability.

Since 1948, FURUNO Electric Company has enjoyed an enviable reputation for innovative and dependable marine electronics equipment. This dedication to excellence is furthered by our extensive global network of agents and dealers.

Your Loud Hailer is designed and constructed to meet the rigorous demands of the marine environment. However, no machine can perform its intended function unless installed, operated and maintained properly. Please carefully read and follow the recommended procedures for installation, operation and maintenance.

We would appreciate hearing from you, the end-user, about whether we are achieving our purposes.

Thank you for considering and purchasing FURUNO equipment.


Features

- Two types of specifications are available: LH-3000 and LH-3000-CG (for U.S. Coast Guard). The two are almost identical; the LH-3000-CG is additionally equipped with a Siren Mode. (Unless otherwise noted “LH-3000” refers to both LH-3000 and LH-3000-CG.)
- 20 W audio output power to get another boat’s attention under almost any condition.
- Eight internationally accepted warning signals can be selected for automatic operation for a variety of different maritime situations alerting nearby vessels of your presence and status in low visibility conditions.
- Four intercom stations (speakers) may be connected to get 2-way communications between master station and one or all intercom stations.
- LED indicators alert you to equipment status.
- Keys are backlit for nighttime operation.
- Smartly designed and intuitive front panel for ease of operation.
- An auxiliary audio input allows transmission of music or other external audio signals (from cassette player, CD player, radio, etc.) to the intercom speakers, external horns or both.

CE declaration

With regards to CE declarations, please refer to our website (www.furuno.com), for further information about RoHS conformity declarations.

SYSTEM CONFIGURATION

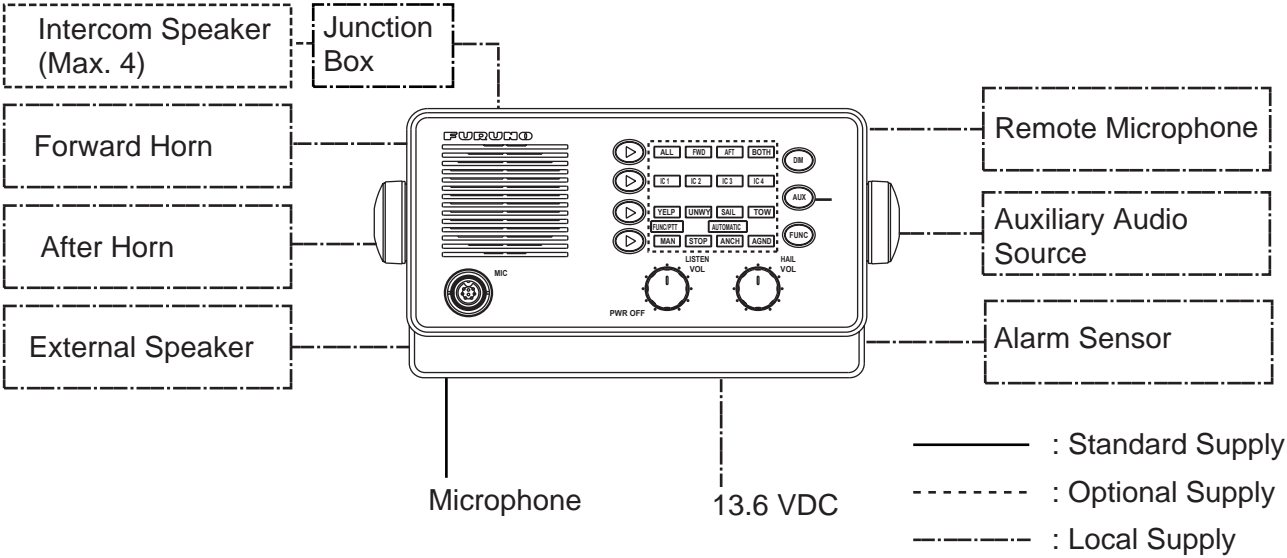

System configuration

EQUIPMENT LIST

Standard supply

Name	Type	Code No.	Qty	Remarks
Loud Hailer	LH-3000		1	See packing list for details.
	LH-3000-CG			
Microphone Set	DM-2003		1 set	
Installation Materials			1 set	
Spare Parts			1 set	
Template	E52-00303	000-149-157	1	

Optional supply

Name	Type	Code No.	Qty	Remarks
Intercom Speaker	LH-3010	000-149-111	1	Max. 4
Flush Mount Kit	LH-3020	000-149-112	1	See packing list.
Twisted Pair Cable	CO-SPEVV-SB-C 0.2X2P	000-111-680	1	5 m
		000-120-792	1	10 m
		000-120-793	1	15 m
		000-120-794	1	20 m

1. INSTALLATION

NOTICE

Do not apply paint, anti-corrosive sealant or contact spray to coating or plastic parts of the equipment.

Those items contain organic solvents that can damage coating and plastic parts, especially plastic connectors.

1.1 Mounting the Loud Hailer

The Loud Hailer can be mounted on a desktop, on the overhead, on a bulkhead or flush mounted in a panel (optional kit required). Refer to the mounting template (supplied) for installation instructions.

Mounting considerations


When planning the location for the Loud Hailer, keep in the mind the following considerations.

- Locate the unit where the front panel can be easily viewed and operated.
- Leave sufficient space at the sides and rear of your unit for ease of maintenance.
- Locate the unit as near to the power source as possible.
- The location should be out of direct sunlight because of heat that can build up inside the cabinet.
- Choose a location not subject to rain and salt spray.
- Locate the unit well away from sources of noise such as motors, alternators and generators.

Mounting procedure

Desktop, bulkhead, overhead mounting

1. Attach rubber cushions (supplied) to the body of the Loud Hailer. Position the cushions so they locate across from the bottom of the slot in the hanger regardless of mounting method.

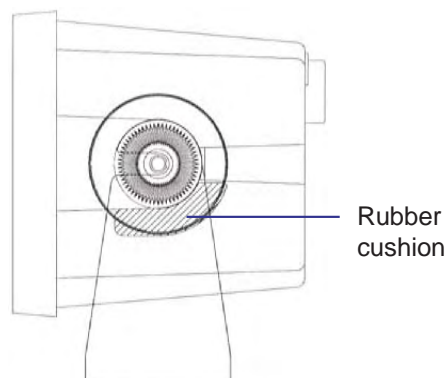

1. INSTALLATION

2. Fix the hanger to the mounting location with tapping screws (6x20).
3. Screw knob bolts into the Loud Hailer.
4. Set the Loud Hailer to the hanger and tighten knob bolts.


Flush mounting

Requires flush mount kit LH-3020 (Code No. 000-149-112). See the flush mount outline drawing for details.

Contents of flush mount kit

Name	Type	Code No.	Qty
Flush Mounting Plate	TZ7300012A	999-999-025	2
Screw	6X12 SUS304	999-999-026	2
Wing Screw	M4X35 SUS304	999-999-027	4
Wing Nut	M4 SUS304	999-999-028	4


1. Make a cutout in the mounting location referring to flush mount outline drawing.
2. Place the Loud Hailer in the cutout.
3. Fix the two flush mounting plates to the Loud Hailer with screws.
4. Screw the wing nuts on the wing screws.
5. Fix the Loud Hailer with the wing bolts and then tighten the wing nuts.

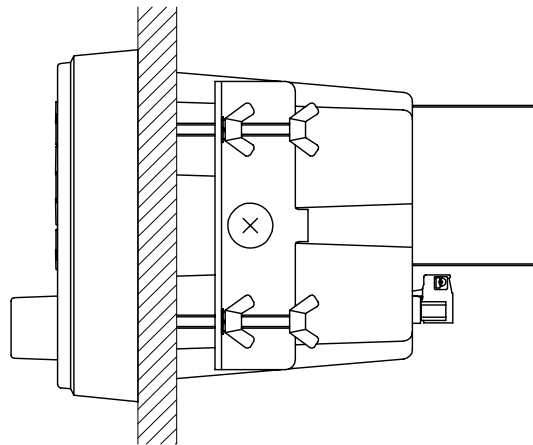

Loud hailer, flush mount

1.2 Intercom Speaker (option)

Four intercom speakers (maximum) may be connected to get 2-way communications between master station and one or all intercom speakers. For mounting dimensions and fixing instructions, see the outline drawing.

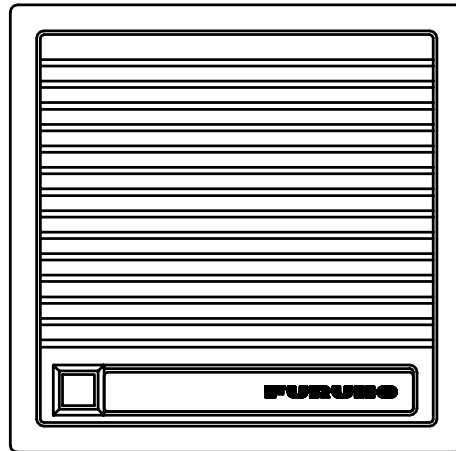


Intercom speaker

1.3 Wiring

All equipment are terminated at the rear panel of the LH-3000. See the illustration on the next page for how to connect equipment to terminals. Refer to the interconnection diagram for detailed information.

Rear panel layout

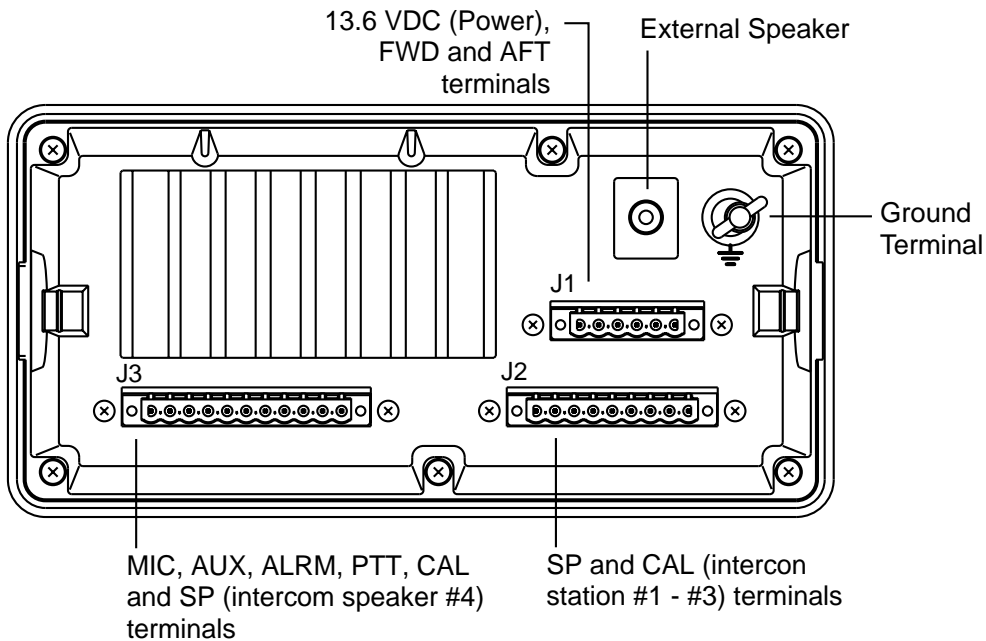


NOTICE

Connect drain wires of armored cables to the ground terminal. Do not short them to the heat sink.

LH-3000, rear panel


Wiring

The illustration below shows how to connect the power supply. Other equipment are connected similarly.

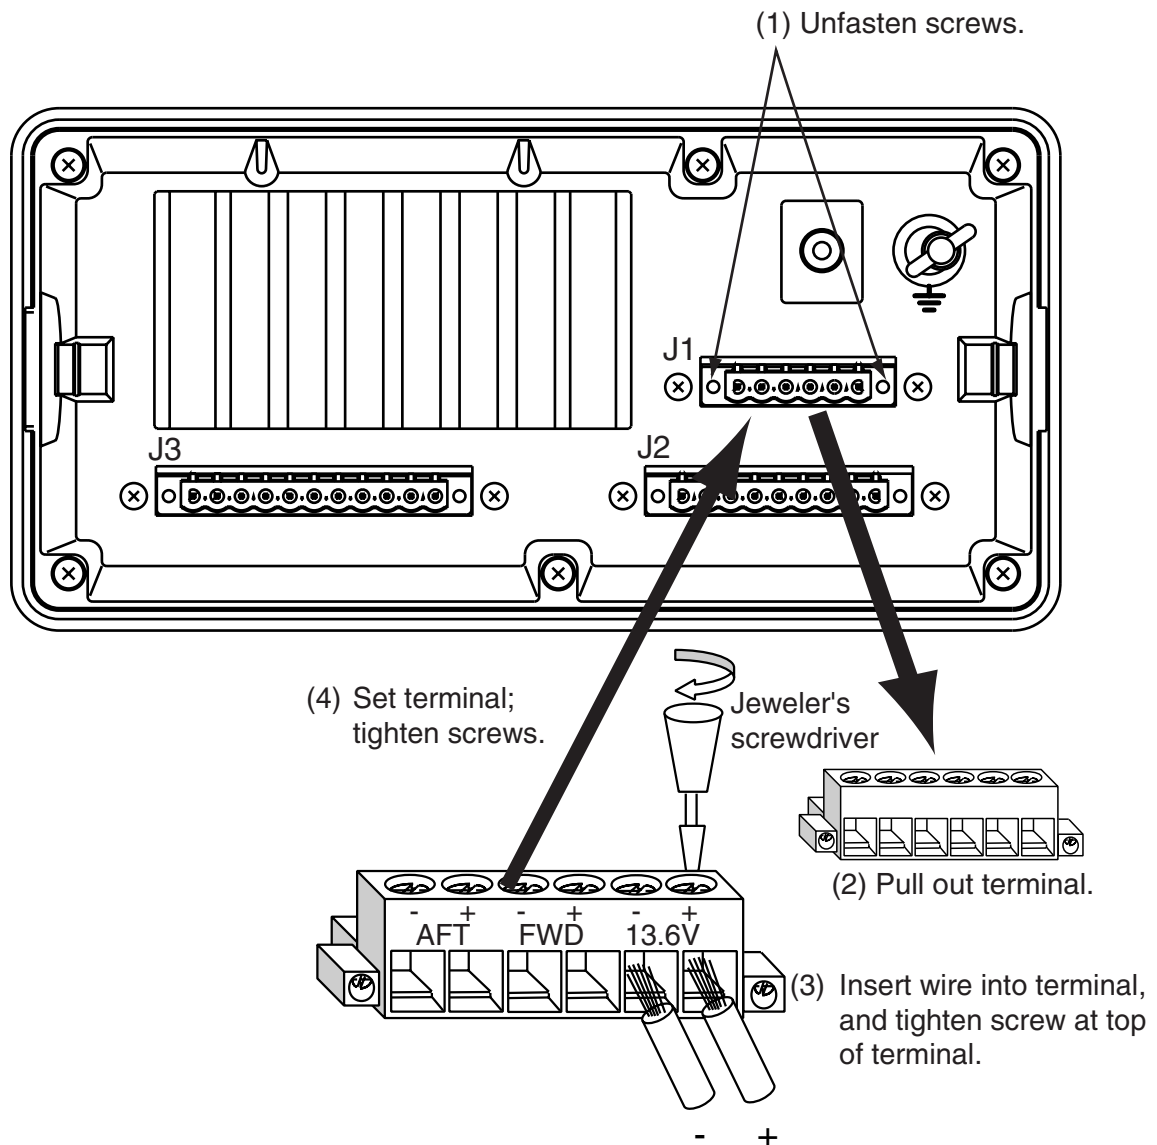

TERMINAL ARRANGEMENT

 J1



J2



J3



Note 1 : Connect power cables to the battery correctly.

Note 2: Connection of intercom speaker cable to J2 or J3:

Brown: CAL

Red: SP1


Black: 0V1

LH-3000, rear panel, how to wire terminals

1. INSTALLATION

Power connection



The LH-3000 is intended for use with a 13.6 VDC power supply. Connect the power cable (local supply) to the terminals labeled "13.6V". Use cable type DPYC-1.5 or equivalent. Fabricate the cable as shown right. For longer runs the wire size of leads should be increased accordingly to minimize line

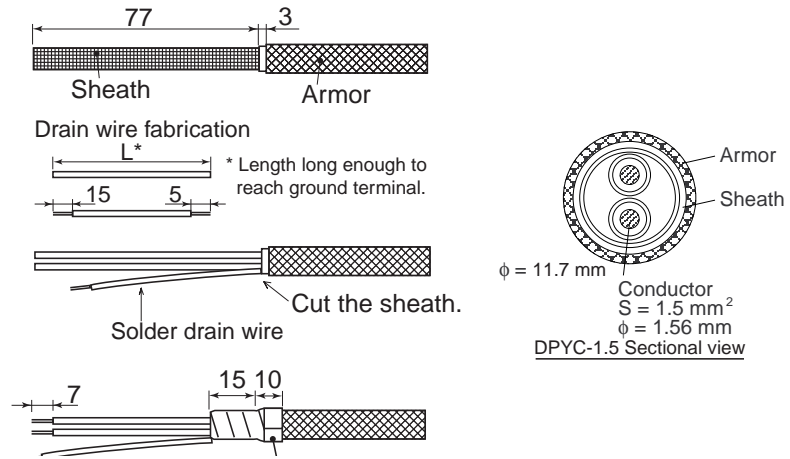

losses. The wire connected to the positive (+) terminal must be connected to the positive terminal on the DC power source, and the wire connected to the negative terminal (-) must be connected to the negative terminal on the DC power source. If the power leads are reversed the fuse (inside the Loud Hailer) will blow.

Intercom speaker (option)

Up to four intercom speakers may be connected to the intercom speaker terminals labeled CAL1-CAL4. Connect each speaker to the terminal block according to desired intercom speaker selection. The cable end is prefabricated. However, to meet EMC requirements the length of the cable must be less than 1 m. If the distance between the Loud Hailer and intercom speaker is greater than 2 m (max. 20 m), use a junction box (local supply). For the connection to the junction box use cable type CO-SPEVV-SB-C 0.2X2P (option) and fabricate it as below. In this case, the length of the cable between the junction box and an intercom speaker must no be more than 1 m regardless of whether the equipment must meet EMC requirements or not.

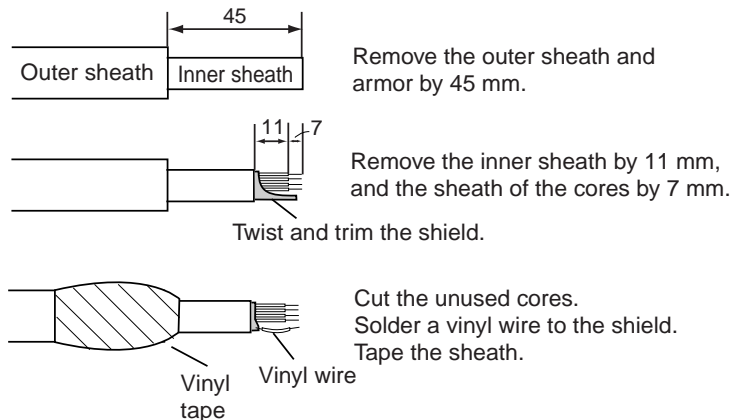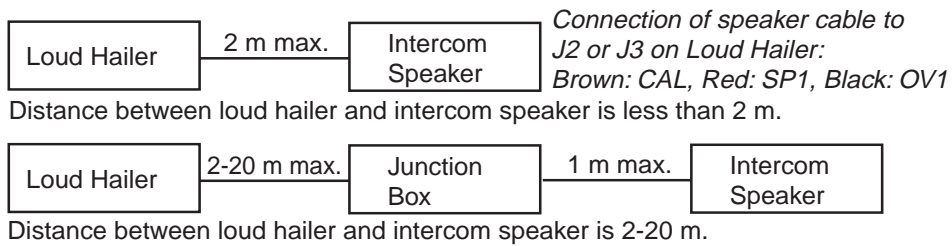

Fabrication of speaker cable

Hailer horn (local supply)


Mount the hailer horns (local supply) facing away from the Loud Hailer to prevent feedback. They should also be pointed in the opposite direction of the microphone as you are speaking into it. Before mounting any horn, you should test it with the HAIL feature with the horn in the desired location to check for suitability of mounting location.

Connect horns to the Loud Hailer with cable type DPYC-1.5 or equivalent. (See page 6 for how to fabricate this cable.) Be sure the cable is suitable for all-weather use. The terminating point on the terminal is either FWD or AFT depending on the location of the speaker.

Burglar alarm (local supply)

The unit can function as a burglar alarm by connecting an external alarm sensor (local supply) to the ALRM terminals. The alarm sensor should be a “normally open switch”. Use cable type TTYCS-1 or equivalent to connect the sensor. Fabricate the cable as shown below.

When the sensor connected to the ALRM terminal becomes shorted and the alarm function is active, the yelp signal is released at maximum volume through both hailer horns.

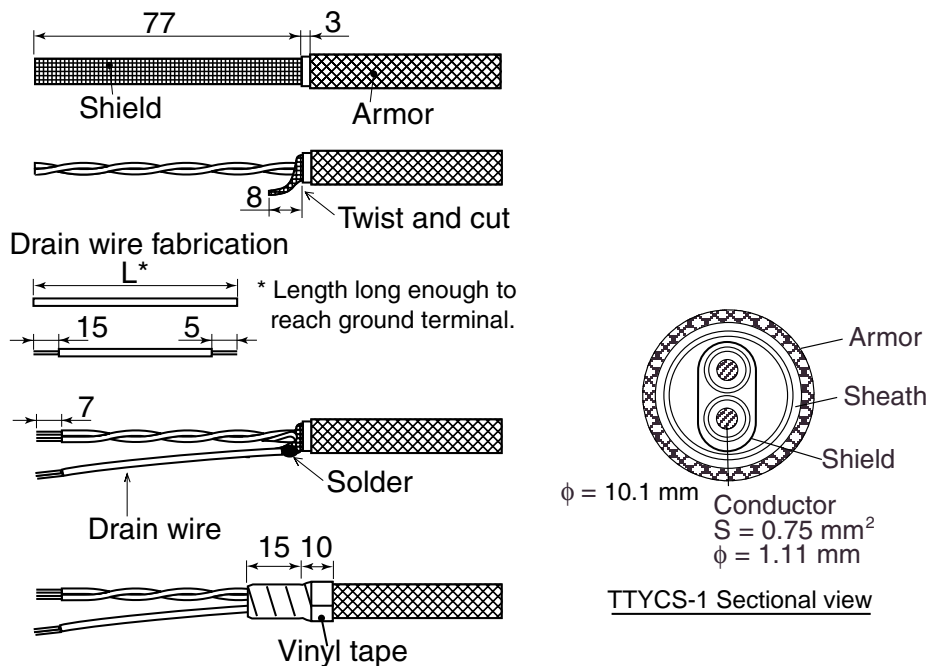


Fabrication of cable TTYCS-1

1. INSTALLATION

Floating ground

The LH-3000 has a floating ground. What this means is that the heat sink ground is floating and will not ground batteries if they are connected to the ship's chassis. To maintain a floating ground:

1. Use a stereo plug when connecting a 4 ohm speaker to the external speaker plug. Connect it as shown in the illustration below.

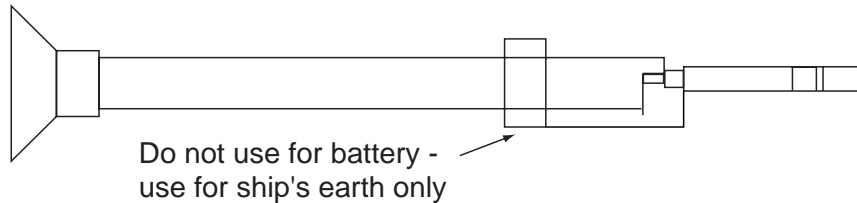


Stereo plug

2. Do not connect any of the output connectors on the rear panel to the ship's ground.
3. SP outputs are floating and must not be connected to either battery or the rear panel. Use a normal two conductor insulated speaker wire for the horn speaker.

Siren mode switch (for LH-3000-CG)

To use the siren mode function, connect a toggle switch whose specifications are as shown below to the burglar alarm terminal.

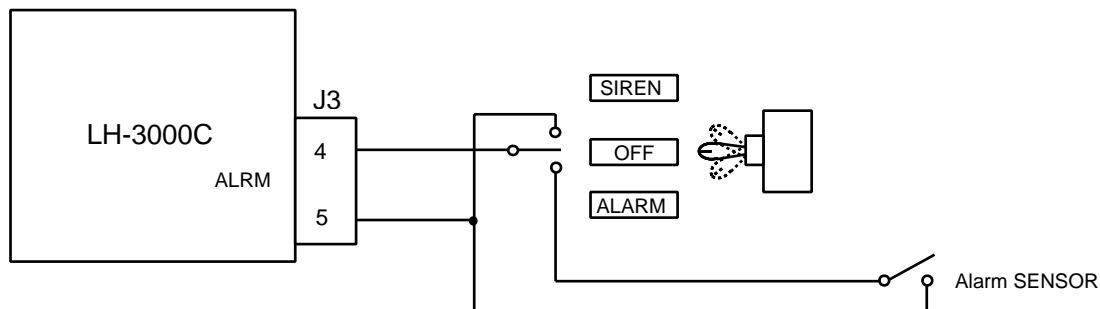


Toggle switch specifications

Circuit:	SPDT (3P)
Switching function:	ON-OFF-ON
Rating:	6A, 250 VAC
Insulation resistance:	500 VDC, 100 Mohms min.
Voltage breakdown:	1500 VAC (one minute)
Contact resistance:	less than 20 Mohms max.

2. OPERATIONAL OVERVIEW

2.1 Controls

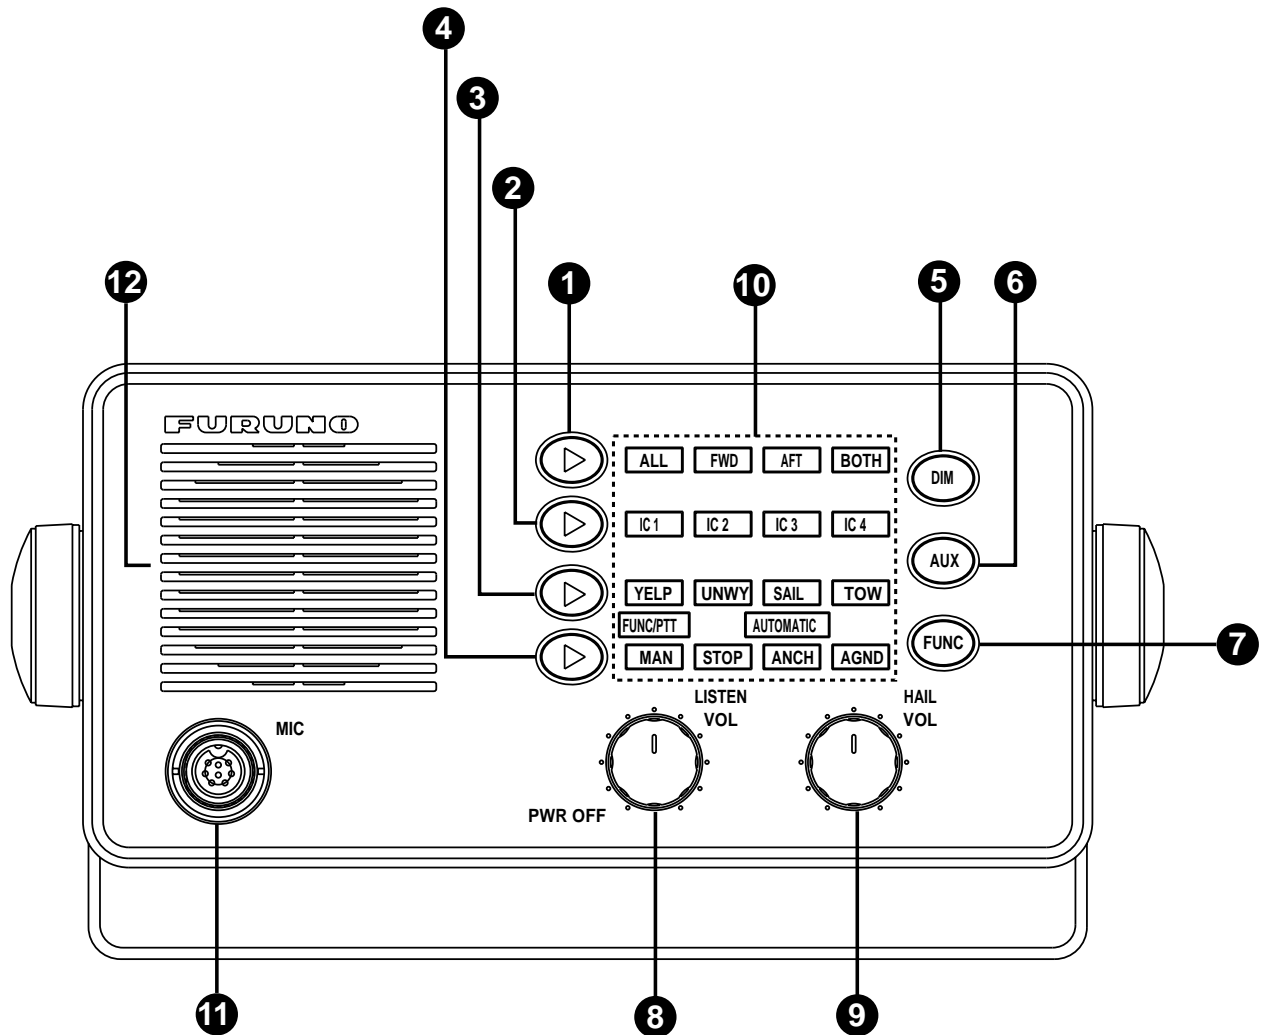

LH-3000, front view

Control description

- | | |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>❶ [Hail Select] Key</p> <p>❷ [Intercom Select] Key</p> <p>❸ [Upper Signal Select] Key</p> <p>❹ [Lower Signal Select] Key</p> <p>❺ [DIM] Key</p> <p>❻ [AUX] Key</p> | <p>Chooses loud hailer speaker to use (ALL, FWD, AFT, BOTH).</p> <p>Chooses which intercom station (IC1, IC2, IC3, IC4) to call.</p> <p>Chooses warning signal among YELP, UNWY, SAIL and TOW.</p> <p>Chooses warning signal among MAN, STOP, ANCH and AGND.</p> <p>Adjusts indicator backlighting, in five levels, including off.</p> <p>Transmits audio signal from external source to all intercom stations.</p> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

2. OPERATION

- | | |
|-------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7 [FUNC] Key | Activates automatic and manual warning signals. |
| 8 [LISTEN VOL] Control | Adjusts listening volume from the internal speaker; turns power on/off. |
| 9 [HAIL VOL] Control | Adjusts output volume from the horn speakers or intercom station speakers. |
| 10 LED Indicators | From top row: <ul style="list-style-type: none">- Hail indicators (ALL, FWD, AFT BOTH)- Intercom indicators (IC1 – IC4)- Alarm signal indicators (YELP(manual), UNWY, SAIL, TOW)- FUNC/PTT and AUTOMATIC indicators- Alarm signal indicators (MAN(manual), STOP, ANCH, AGND) |
| 11 MIC | MIC input |
| 12 Speaker | |

2.2 Turning the Power On/Off

Turn the [LISTEN VOL] control clockwise to turn on the Loud Hailer. The “ALL” indicator lights, which means the Loud Hailer is in standby and awaiting your command.

The equipment is in the standby mode when the “ALL” indicator is lit. Normally, the equipment should be returned to the standby mode after a function has been completed. In the standby mode the Loud Hailer is ready to call all stations, including both horn speakers and all intercom stations, and is ready to receive a call from any intercom station.

2.3 Adjusting Key Backlighting

You may adjust the intensity of the key backlighting cyclically with the [DIM] key, in five levels, including off.

2.4 Adjusting Output Level

Turn the [HAIL VOL] control to adjust the output volume from the horn speakers or intercom speakers. Clockwise rotation increases volume; counterclockwise rotation decreases it.

2.5 Adjusting Listening Volume

Turn the [LISTEN VOL] control to adjust the listening volume from the Loud Hailer's internal speaker and external speaker (if connected).

2.6 Calling All Intercom Stations

1. In the standby mode, hold the microphone 2-3 cm from your mouth and press the PTT switch on the microphone. Speak into the microphone. All intercom stations and both horn speakers will hear you.
2. After speaking, release the PTT switch to return the equipment to the standby mode.

Note: To call all intercom stations while sounding warning signals, see page 17.

2.7 Calling a Specific Intercom Station

1. Press the [Intercom Select] key until the indicator lights on the desired intercom station. After a one-second delay, a short tone sounds from the selected intercom station.
2. Press the PTT switch on the microphone and speak into the microphone.
3. Release the PTT switch to listen for a reply from the selected intercom station. If necessary, adjust listening volume with the [LISTEN VOL] control.
4. After completing your conversation, press the [Hail Select] key to return to the standby mode.

Note: To call a specific intercom stations while sounding warning signals, see page 17.

2.8 Receiving a Call from an Intercom Station

When an intercom station is calling the main station, the indicator for the calling station flashes on the main station's indicator and a tone sounds while the intercom station operator is pressing the station's calling switch.

Automatically selecting a single calling station

1. In the standby mode, press the PTT switch on the microphone to answer the call. The LH-3000 automatically switches to the calling station and the flashing indicator then lights steadily.
2. If necessary, adjust listening volume with [LISTEN VOL] control.
3. After you have finished your conversation, press the [Hail Select] key to return to the standby mode.

Automatically selecting multiple calling stations

When you receive a call from more than one station, the appropriate intercom station indicators flash and a tone sounds.

1. In the standby mode, press the PTT switch on the microphone. When calls are received simultaneously, the low-number station will be selected first.
2. After you have completed your conversation, press the [Hail Select] key to return to the standby mode.
3. Press the PTT switch on the microphone again and the next low-number station will automatically be selected.
4. After you have finished all intercom conversations, press the [Hail Select] key to return to the standby mode ("ALL" indicator lights).

Calling all intercom stations while an intercom voice is selected

1. Press and hold the [Hail Select] key.
2. Press the PTT switch on the microphone and speak into the microphone. All station indicators flash.

Manually selecting a calling station

1. Press the [Intercom Select] key until the indicator lights for the desired station.
2. Press the PTT switch on the microphone and answer the call.
3. Release the PTT switch to listen to the intercom station. Adjust listening volume with the [LISTEN VOL] control if necessary.
4. To call another station, select the next station with the [Intercom Select] key.
5. After you have finished all conversations, press the [Hail Select] key to return to the standby mode.

Intercom station operation

Press the button on the intercom to call. Release the button to listen.

2.9 Hailing by Voice

1. Press the [Hail Select] key until the indicator lights for the desired horn speaker(s).
2. Press the PTT switch on the microphone and speak into the microphone. If necessary, adjust the output power to the speaker(s) with the [HAIL VOL] control.
3. Release the PTT switch and the Loud Hailer will switch to the listening mode, using the speaker(s) as microphone(s). If necessary, adjust listening volume with the [LISTEN VOL] control.
4. After speaking, press the [Hail Select] key to return to the standby mode.

2.10 Sounding Warning Signals

Your Loud Hailer has eight different warning signals: two manual and six automatic. The two manual signals, YELP and MAN, are designed to be sounded at each press of the PTT switch on the microphone. The six automatic signals are sounded when the [FUNC] key is operated.


Only the horn speakers sound warning signals and the volume is automatically set to maximum when sounding warning signals.

Description of warning signals

Manual warning signals

MAN: Signal for passing. The lengths and timing of the horn blasts are controlled by pressing the PTT switch on the microphone.


YELP: Yelp type emergency siren.

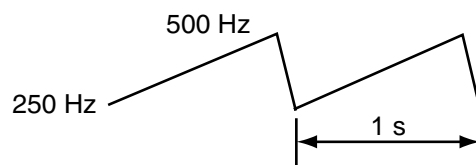

Yelp signal


Automatic warning signals

UNWY: Warning signal for power-driven vessels underway. One 5-second blast at 120 second interval intervals.

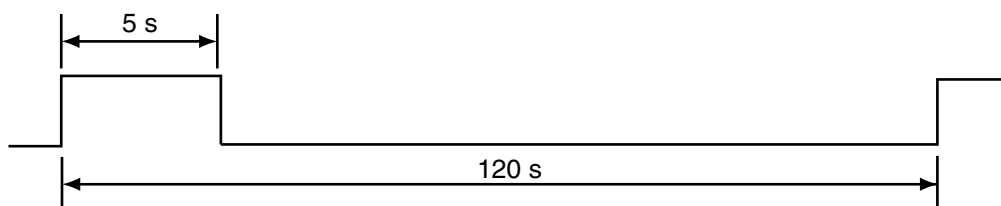


Underway signal

SAIL: Warning signal for sailboats, tug boats and tow boats underway. One 3-second blast, followed by one 2-second interval, one 1-second blast, one 2-second interval and one 1-second blast. Repeated every 120 seconds.

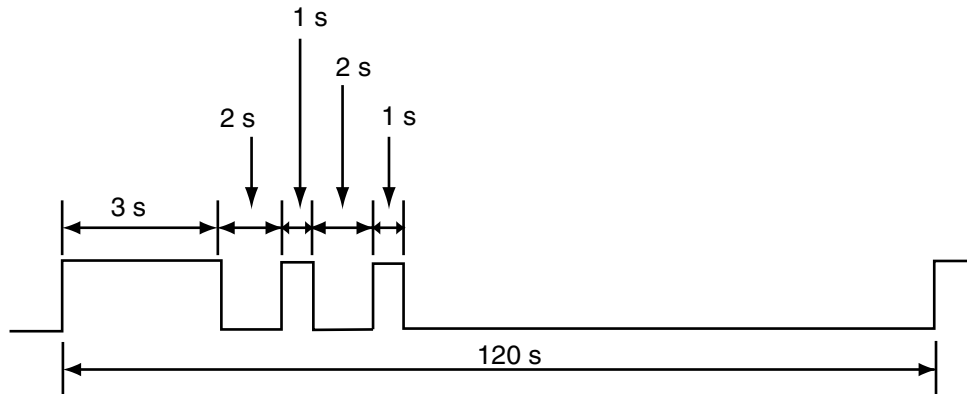


Sailing signal

TOW: Warning signal for vessels under tow. One 3-second blast, followed by one 2-second interval, one 1-second blast, one 2-second interval, one 1-second blast, one 2-second interval, and one 1-second blast. Repeated every 120 seconds.

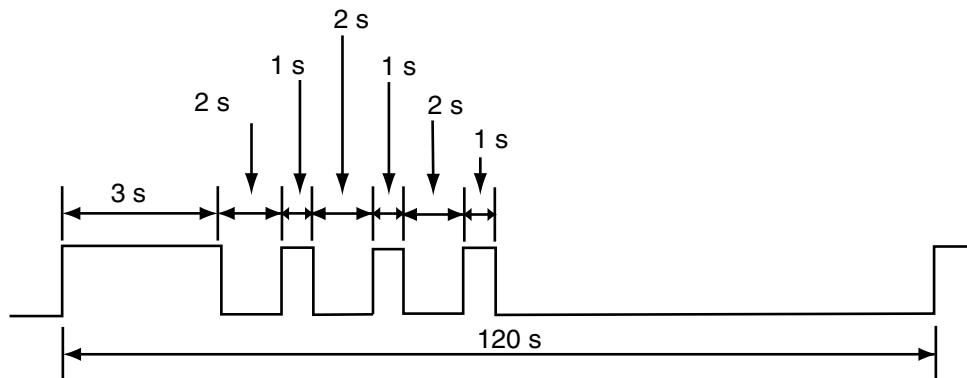

Towing signal


STOP: Warning signal for power-driven vessel that is stationary. Two 3-second blasts, with a 2-second interval between each blast, repeated every 120 seconds.

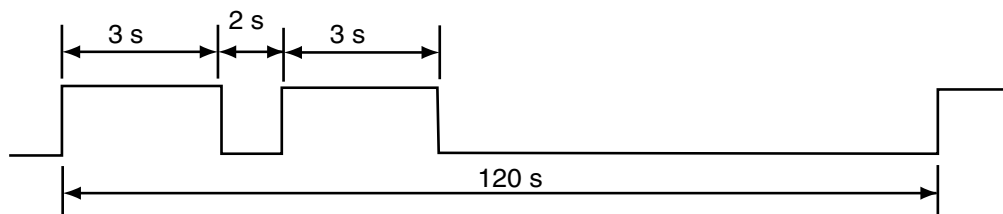

Stop signal


2. OPERATION

ANCH: Warning signal for vessels at anchor. A rapidly ringing bell tone sounds for a duration of 5 seconds, repeated at an interval of 60 seconds.

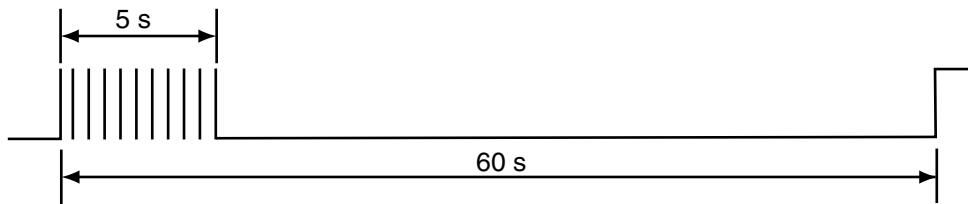

Anchor signal

AGND: Warning signal for vessels aground. Two bell tones of 0.5 seconds, a bell tone of 1 second followed by a rapidly ringing bell tone for a duration of 5 seconds, followed by a bell tone of 2 seconds and 0.5 seconds. Repeated once every 60 seconds.

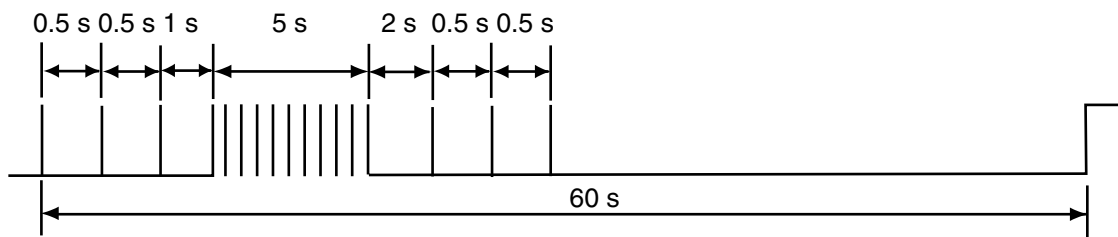

Aground signal

Sounding a manual warning signal

1. Press the [Hail Select] key until the indicator lights for the desired horn speaker(s). If no selection is made, "BOTH" will be automatically selected when a warning signal is initiated.
2. Press the [Upper Signal Select] key to select YELP or press the [Lower Signal Select] key to select MAN. The indicator begins flashing for the desired signal.
3. Press the [FUNC] key to activate the warning signal. The indicator stops flashing and lights steadily.
4. Press the PTT switch on the microphone to sound the warning signal. Each time the PTT switch is pressed, the warning signal will sound until the PTT switch is released. When the PTT switch is released the equipment will return to the listen mode. Adjust the [LISTEN VOL] control if necessary.
5. To temporarily interrupt manual signals with voice transmissions do the following:
 - 1) Press the [Hail Select] key. The indicator for the chosen signal flashes to indicate the signal is still selected, but not active.
 - 2) Press the PTT switch on the microphone and speak into the microphone. Your voice will sound to all stations.
 - 3) Release the PTT switch again to return to manual warning signals.

Sounding an automatic warning signal

1. Press the [Hail Select] key until the indicator lights for the desired horn speaker(s). If no selection is made, "BOTH" will be automatically selected when a warning signal is initiated.
2. Press the [Upper Signal Select key] to select UNWY, SAIL or TOW or press the [Lower Signal Select] key to select STOP, ANCH or AGND until the indicator flashes for the desired signal.
3. Press the [FUNC] key to activate the automatic warning signal. The indicator stops flashing and lights and then the signal is sounded from the selected horn speaker(s).
4. To temporarily interrupt automatic signals with voice transmissions, press the [FUNC] key. The indicator for the chosen signal flashes to indicate the signal is still selected, but not active.
5. Press the PTT switch on the microphone and speak into the microphone. Your voice sounds from the chosen horn speaker(s).
6. Release the PTT switch and press the [FUNC] key again to return to automatic warning signals.
7. To stop transmitting automatic warning signals, press the [FUNC] key followed by the [Hail Select] key to return to the standby mode.

Calling intercom stations while sounding warning signals

Calling all intercom stations

1. While pressing and holding down the [Hail Select] key, press the PTT switch. All intercom indicators flash.
2. Press the PTT switch on the microphone and speak into the microphone.
3. After speaking, release the PTT switch and then the [Hail Select] key to return to the chosen warning signal.

Calling a specific intercom station

1. Press the [Intercom Select] key until the indicator lights on the desired intercom station. A short tone sounds from the selected intercom one second after choosing a station.
2. Press the PTT switch on the microphone and speak into the microphone.
3. Release the PTT switch to listen to the reply from the selected intercom station. If necessary, adjust the listening volume with the [LISTEN VOL] control.
4. After you have finished your conversation, press the [Hail Select] key to return to the standby mode. Signal activity on the selected horn speaker will be restored.

2.11 Transmitting the Auxiliary Signal

Transmitting the auxiliary signal over all speakers

An audio signal from an external audio source can be transmitted through the equipment via the AUX input connector on the rear panel.

1. In the standby mode, press the [AUX] key. The signal from the external AF source (radio, CD player, etc.) sounds from all intercom stations and any connected horn speakers. Adjust the output volume level directly from the external input source.
2. To turn off the external AF signal, press the [AUX] key to return to the standby mode.

Transmitting the auxiliary signal over all intercom stations

1. Press and hold the [Intercom Select] key.
2. Press the [AUX] key.

Returning auxiliary transmission to standby mode

Press the [AUX] key twice.

2.12 Alarm Mode

The LH-3000 can operate as a burglar alarm by connecting an external, normal-open switch to the ALRM terminals on the rear panel.

Both horn speakers are selected automatically when the alarm mode is enabled. If the alarm is triggered, the volume output is automatically set to maximum.

Enabling the alarm mode

1. Press and hold down the [Upper Signal Select] key until the YELP indicator flashes. Note that you may light the MAN indicator (with the [Lower Signal Select] key) instead of the YELP indicator.
2. Press the [FUNC] key until the ALL, FWD, AFT and BOTH indicators light. The YELP indicator goes off.
3. After approximately five minutes, the ALL, FWD, AFT and BOTH indicators go off. Then the equipment goes into standby, lighting the BOTH indicator every four seconds to indicate standby mode.



See the next page for procedure flow.

When an attempt is made to remove the Loud Hailer

When an attempt is made to remove the Loud Hailer, the alarm sound is released through both horn speakers at maximum volume. The alarm sounds for two minutes followed by a five-minute rest time. The BOTH indicator lights every four seconds during the sounding of the alarm or the five-minute rest period.

Disabling the alarm mode

Press any key or switch other than the [AUX] or [DIM] key, or turn off the power.

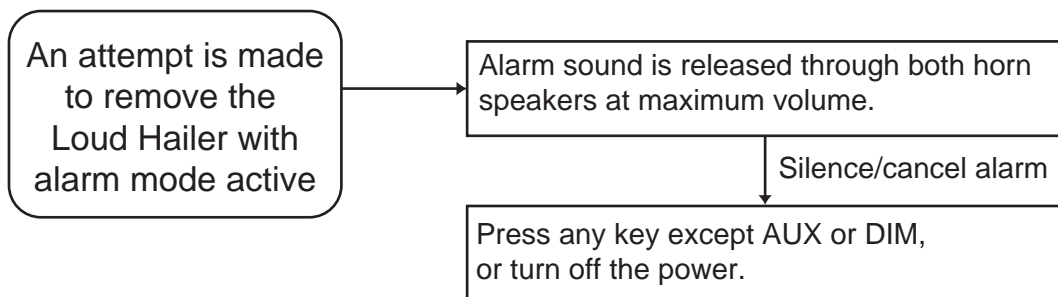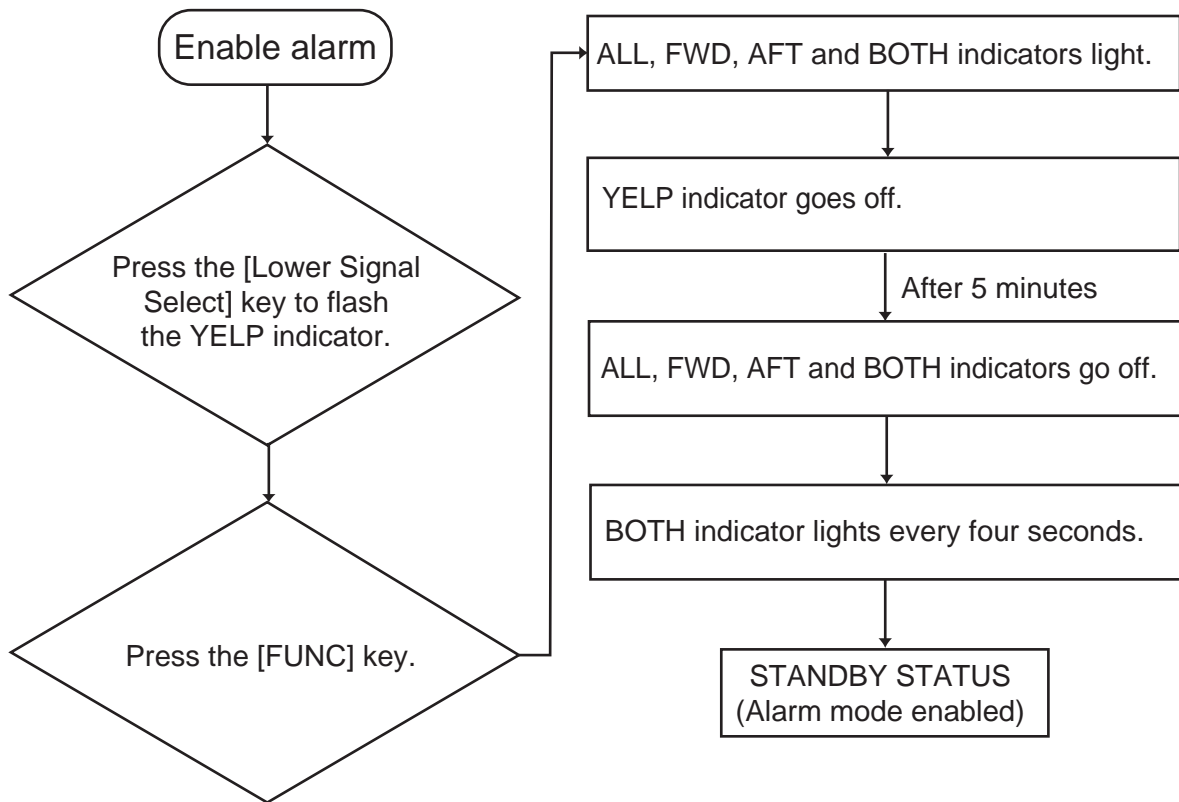

Alarm setting/cancel flow

2.13 Siren Mode (for LH-3000-CG)

Enabling the siren mode

The siren mode, activated by a switch connected to the burglar alarm terminal, functions to sound the warning signal (YELP) from both horn speakers in the standby mode. To interrupt the warning signal to speak, press the PTT switch on the microphone and speak into it.

Communicating with intercom stations while in the siren mode

You may communicate with intercom stations in the siren mode. However, unlike the standby mode, you must choose intercom stations.

1. In the siren mode, press the [Intercom Select] key until the indicator lights on the desired intercom station. After a one-second delay, a short tone sounds from the selected intercom station.
2. Press the PTT switch on the microphone and speak into it.
3. Release the PTT switch to listen for a reply from the selected intercom station. If necessary, adjust listening volume with the [LISTEN VOL] control.
4. After completing your conversation, press the [Hail Select] key to return to the siren mode.

Talking to ALL intercom stations while in the siren mode

You may talk to ALL intercom stations. However, unlike the standby mode, you must choose intercom stations.


1. In the siren mode, press the [Intercom Select] key until the indicator lights on the desired intercom station.
2. Press and hold down the [Hail Select] key, then press the PTT switch and talk into the microphone.
3. After speaking, release the PTT switch and then the [Hail Select] key to return to the siren mode.

Disabling the siren mode

Turn off the siren mode switch, and the LH-3000-CG stops sounding.

3. MAINTENANCE, TROUBLESHOOTING

Periodic checks and maintenance are important for maintaining performance. This chapter contains maintenance and troubleshooting instructions to be followed to obtain optimum performance and the longest possible life of the equipment.

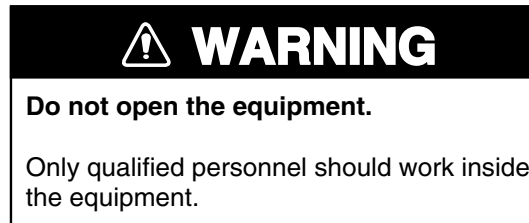

3.1 Preventive Maintenance

General checks

Check the following monthly.

Check all cabling. If damaged, replace.

Check connections. Retighten if necessary.

Measure the input voltage to be sure it is within the rated voltage (13.6 VDC \pm 20%).

Cleaning

Dust or dirt should be removed from exterior surfaces with a soft, dry cloth. Do not use chemical-based cleaners to clean the Loud Hailer – they can remove paint and markings.

3.2 Replacing the Fuse

The 6A fuse inside the Loud Hailer protects it from reverse polarity and equipment fault. If the power cannot be turned on, the fuse may have blown. Have a qualified technician check the fuse.

 WARNING
<p>Use the proper fuse.</p> <p>Use of a wrong fuse can result in damage to the equipment or cause fire.</p>

3.3 Troubleshooting

Below are simple troubleshooting procedures which the user may follow to try to restore normal operation. If normal operation cannot be restored, do not attempt to check inside any unit. Any repair work is best left to a qualified technician.

Troubleshooting table

If...	Then...
power cannot be turned on	check that the power cable is tightly connected. fuse may have blown. Have a qualified technician check the fuse.
you cannot hear voice from an intercom station	adjust the [LISTEN VOL] control.
output volume is too low	adjust the [HAIL VOL] control.

**SPECIFICATIONS OF LOUD HAILER
LH-3000**

1 AUDIO OUTPUT

- 1.1 Hail speaker 20 W, 8 ohms
- 1.2 Intercom speaker 4.0 W, 4 ohms
- 1.3 External speaker 4.0 W, 4 ohms
- 1.4 Internal speaker 2.2 W, 4 ohms

2 INPUT IMPEDANCE

- 2.1 MIC impedance 600 ohms
- 2.2 Aux impedance 10K ohms

3 INPUT SENSITIVITY

- 3.1 MIC sensitivity -73 ±3 dB (0 dB=1V/μBar)
- 3.2 Aux sensitivity 0 dBm ±3 dB (at 1 kHz)

4 DISTORTION FACTOR

- 4.1 Hail mode 10% (1 kHz 20 W)
- 4.2 Intercom mode 10% (1 kHz 4.0 W)

5 SIGNAL-TO-NOISE

- 5.1 Hail mode 60 dB (1 kHz)
- 5.2 Intercom mode 60 dB (1 kHz)

6 POWER SUPPLY

12 VDC, less than 5A, less than 280 mA (stand-by)

7 ENVIRONMENTAL CONDITIONS

- 7.1 Ambient temperature -15 to 55°C
- 7.2 Relative humidity 95% at 40°C
- 7.3 Waterproofing IPX5 (Front panel), IPX0 (Chassis)

 
8 UNIT COLOR




N3.0

This page is intentionally left blank .


PACKING LIST LH-3000

05EB-X-9851-5 1/1



NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
ユニット			
ユニット			
LOUD HAILER		LH-3000 000-040-004-00	1

   NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
マイクセット			
マイクセット			
MICROPHONE		DM-2003 999-999-022-00 **	1
MICハンガー		FOR DM-2003 999-999-204-00 **	1
＋バインド・タッピング・ネジ		3X5 999-999-205-00 **	2


予備品

NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
予備品			
予備品			
FUSE GLASS TUBE TYPE		FGMB 125V 6A PBF FGMB 6A 125V 000-157-492-10 000-147-324-00	2

   
 
工事材料

NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
工事材料			
工事材料			
＋トラスタッピング・ネジ 1個		6X20 SUS304 000-162-613-10	4
RUBBER CUSHION		TZ7300030A 000-149-771-00	1

1.コード番号末尾の[**]は、タミコードに付き、注文できません。
** THIS CODE CANNOT BE ORDERED.

NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
防振ゴム2		TZ7300031A	1
RUBBER CUSHION		000-149-772-00	

図書

NAME	OUTLINE	DESCRIPTION/CODE No.	Q'TY
型紙		E52-00303-*	1
取扱説明書		000-149-157-1* OM*-56460-*	1
OPERATOR'S MANUAL		000-149-118-1*	





型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらが入っています。なお、品質は変わりません。
TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO

工事材料表

INSTALLATION MATERIALS

CODE NO.		05EB-X-9402-1		1/1	
TYPE					
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	ケーブル(2P) *20M*	 L=20M	COSPEWSBC 2PX0.2LF CODE NO. 001-240-480-00	1 BE SELECT	TO
2	ケーブル(2P) *15M*	 L=15M	COSPEWSBC 2PX0.2LF CODE NO. 001-240-470-00	1 BE SELECT	TO
3	ケーブル(2P) *10M*	 L=10M	COSPEWSBC 2PX0.2LF CODE NO. 001-240-460-00	1 BE SELECT	TO
4	ケーブル(2P) *5M*	 L=5M	COSPEWSBC 2PX0.2LF CODE NO. 001-240-440-00	1 BE SELECT	TO

型式/コード番号が異なる場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。
 TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT.
 QUALITY IS THE SAME.
 (略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO ELECTRIC CO., LTD.

 
 
 

05646-M02-B

FURUNO

フラッシュマウントキット

FLUSH MOUNT KIT.

LH-3020

CODE NO.		1000-149-112		05EB-X-9401-0	
TYPE				1/1	
番号 NO.	名称 NAME	略図 OUTLINE	型名/規格 DESCRIPTIONS	数量 Q'TY	用途/備考 REMARKS
1	ネジ SCREW		6X12 SUS304 CODE NO. 999-999-026	2	
2	ナット NUT		M4 SUS304 27.1 CODE NO. 999-999-028	4	
3	ネジ SCREW		M4X35 SUS304 27.1 CODE NO. 999-999-027	4	
4	フラッシュマウント金具 FLUSH MOUNTING PLATE		TZ7300012A CODE NO. 999-999-025	2	

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

05EB-X-9401

FURUNO ELECTRIC CO., LTD.

05646-M01-A

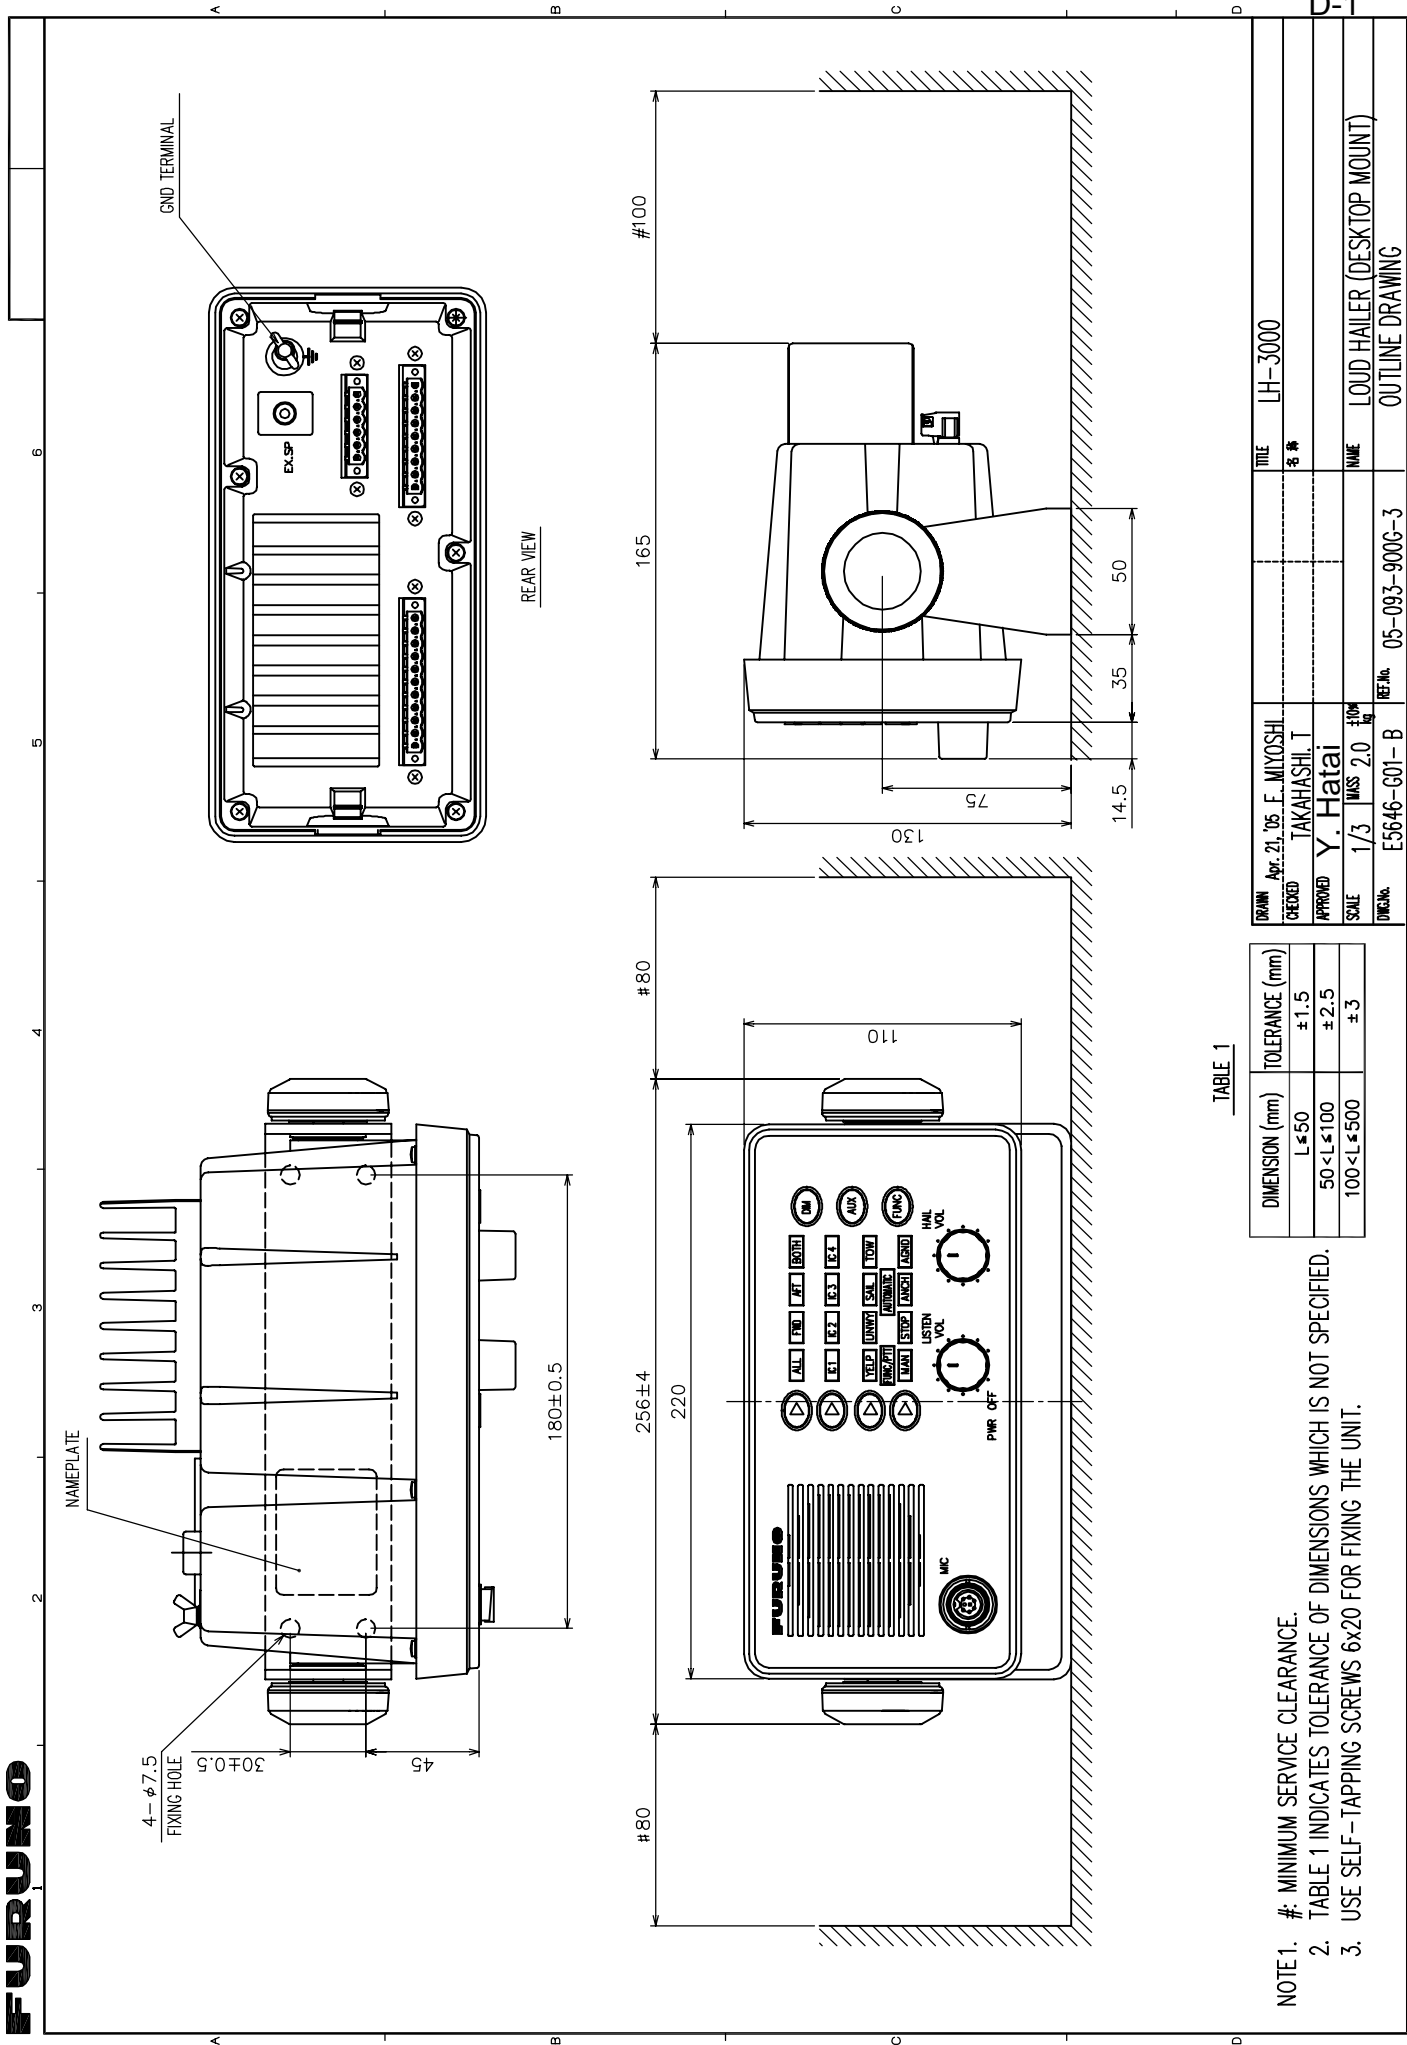


TABLE 1

DIMENSION (mm)	TOLERANCE (mm)
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

- NOTE 1. # MINIMUM SERVICE CLEARANCE.
- 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
- 3. USE SELF-TAPPING SCREWS 6x20 FOR FIXING THE UNIT.

DRAWN	Apr. 21, '05	F. MIYOSHI	TITLE	LH-3000
CHECKED		TAKAHASHI, T	各 号	
APPROVED		Y. Hatai	NAME	LOUD HAILER (DESKTOP MOUNT)
SCALE	1/3	WAS 2.0	REF. No.	05-093-9000-3
DWG. No.	E5646-601-B		OUTLINE DRAWING	





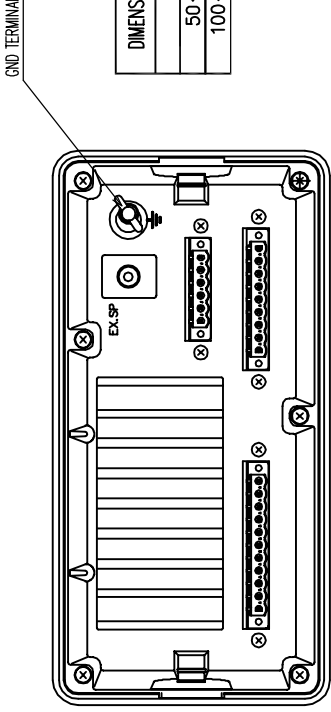


TABLE 1

DIMENSIONS (mm)	TOLERANCE (mm)
L ± 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

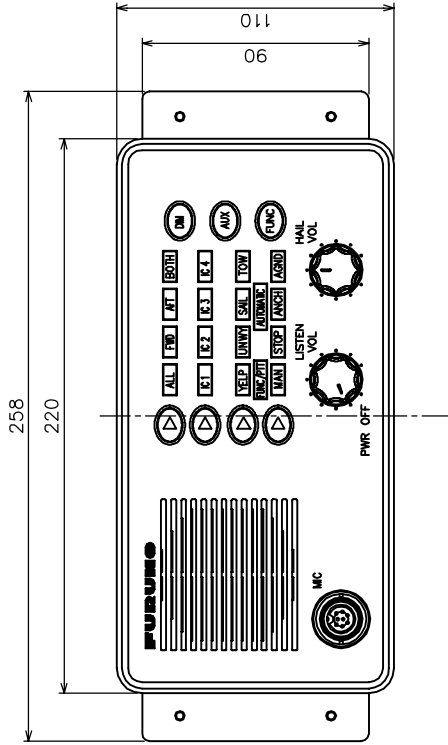
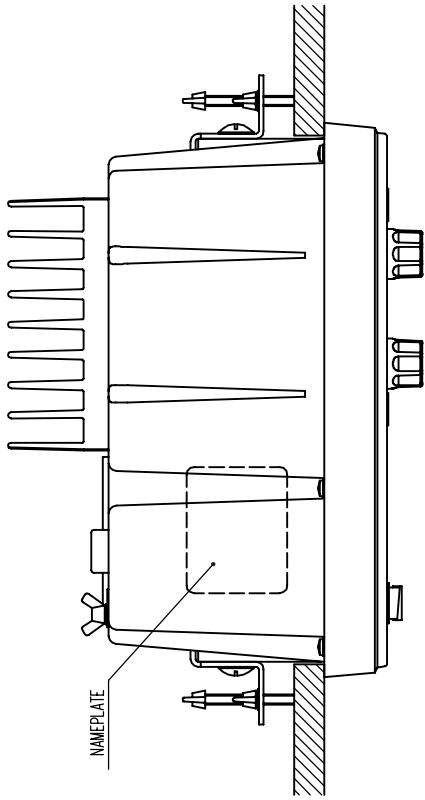
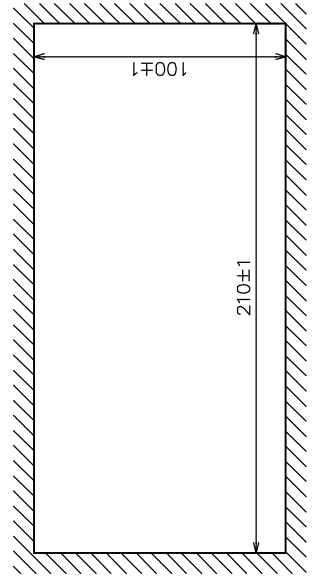
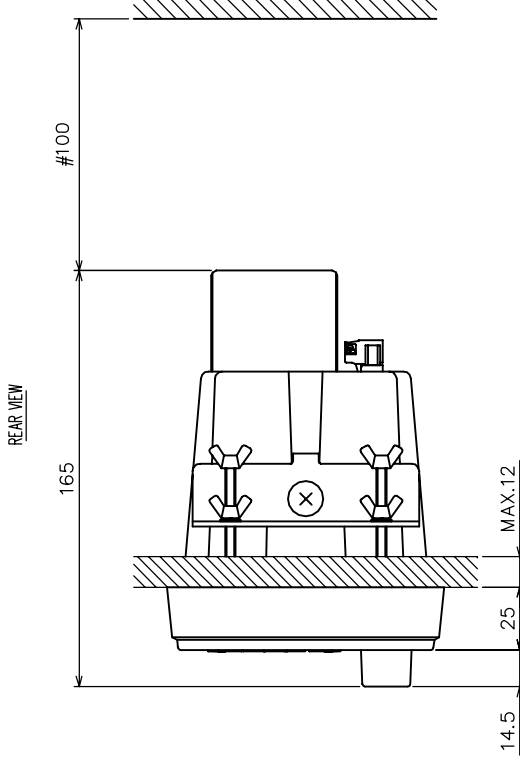


NOTE 1. # MINIMUM SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

DRAWN	Apr. 21, '05 F. MIYOSHI	TITLE	LH-3000
CHECKED	TAKAHASHI, T	NAME	LOUD HALER (FLUSH MOUNT)
APPROVED	Y. Hatai	OUTLINE DRAWING	
SCALE	1/3 MASS 2.0 310M kg	REF. No.	05-093-910C-2
DWG. No.	E5646-G02-B		





TABLE 1

DIMENSIONS (mm)	TOLERANCE (mm)
L ≤ 50	±1.5
50 < L ≤ 100	±2.5
100 < L ≤ 500	±3

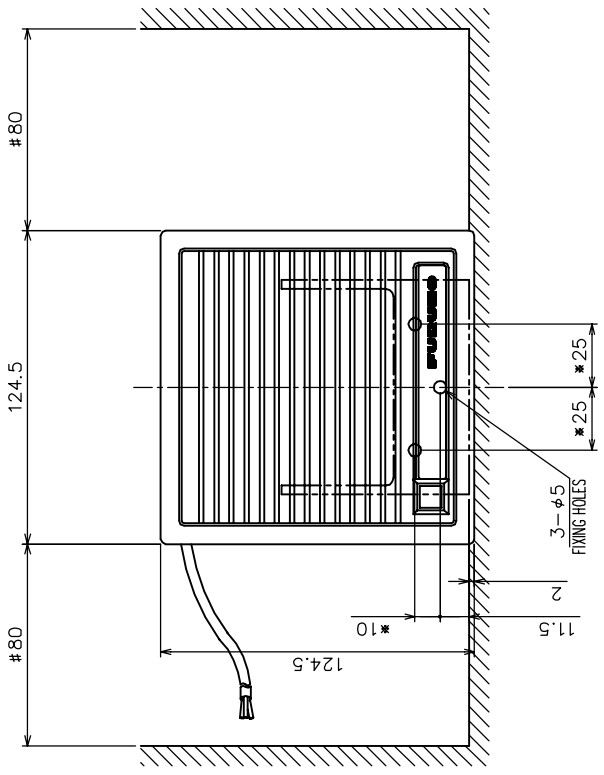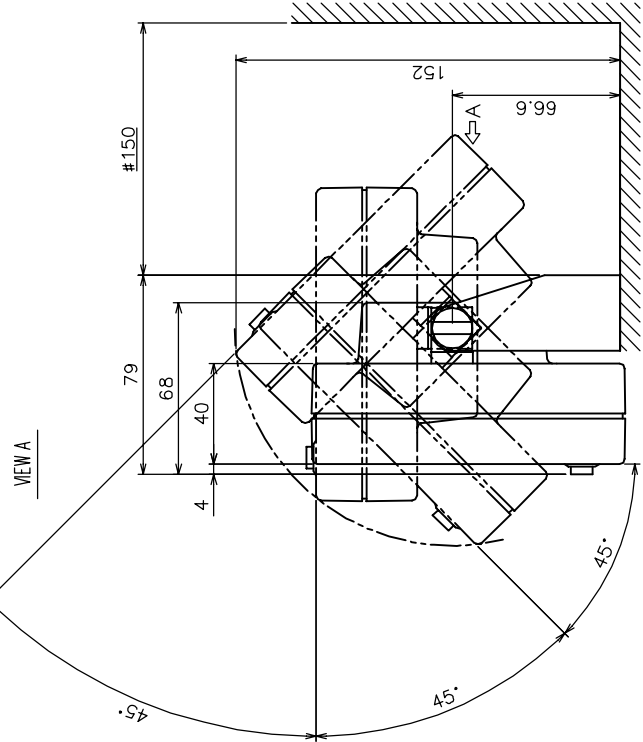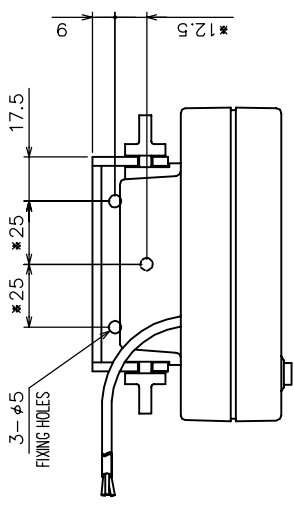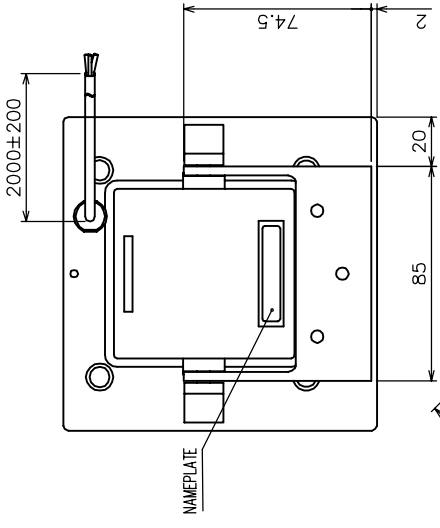


DRAWN	Apr. 21, '05	F. MIYOSHI	TITLE	LH-3010
CHECKED		TAKAHASHI, T		名称
APPROVED		Y. Hatai		
SCALE	1/3	MASS 0.58 ^{±0.04} kg		
FIG. No.	E5646-G03-B	REF. No.	05-093-920G-1	
				INTERCOM SPEAKER (DESKTOP MOUNT)
				OUTLINE DRAWING

- NOTE 1. *: DIMENSIONS FOR FIXING HOLE POSITIONS.
- 2. #: MINIMUM SERVICE CLEARANCE.
- 3. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
- 4. USE SELF-TAPPING SCREWS 4x18 FOR FIXING THE UNIT.

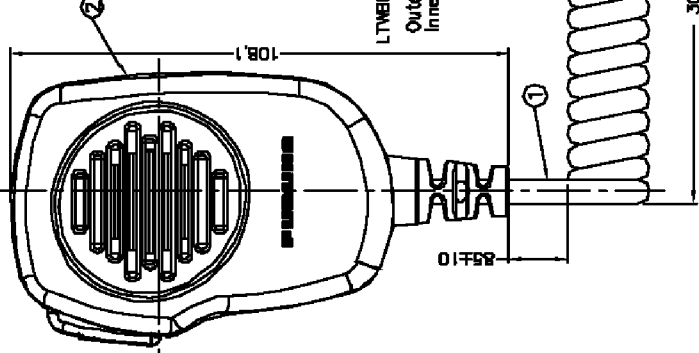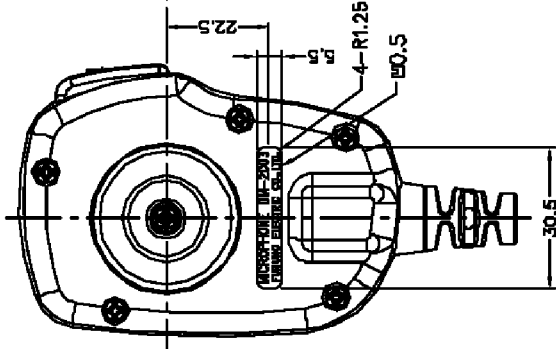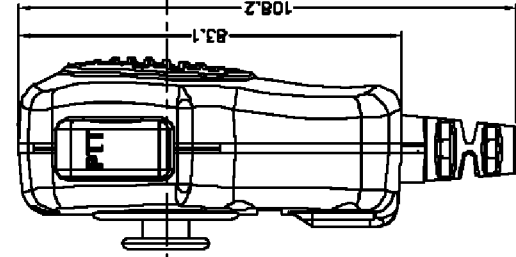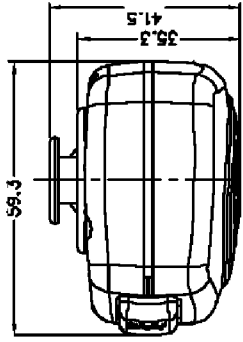

Twisted Pair : 26AWG Wire / 4 Pairs
 1A(Brown)-1B(Red) 1 Pair
 2A(Blue) -2B(Black) 1 Pair
 3A(Yellow)-3B(Orange) 1 Pair
 4A(Green)-4B(Gray) 1 Pair

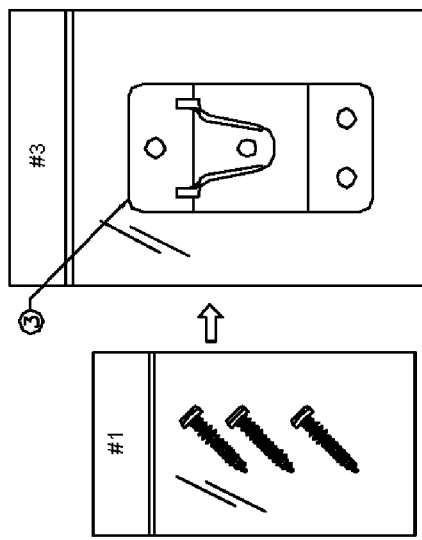

SPECIFICATION OF MICROPHONE :

- 1 Dimension: 22*10.4(H)mm
- 2 Impedance: 600 ±15%
- 3 Frequency Range: 70Hz ~ 10000Hz
- 4 Sensitivity: -73dB ±2dB(0dB=1v/ubar at 1000Hz)
- 5 Directivity: Omnidirectional

B	DRAIN	SHIELD
7	Brown	1A
6	Gray	4B
5	Yellow	3A
4	Black	2B
3	Blue	Mic(C)-
2	Green	Mic(H)+
1	Orange	SW+
	Red	SW-
Conn1	Wires Color	Microphone
		Pin Out

PIN ASSIGNMENTS
Front View


NO.	NAME	COLOR	SPECIFICATION	QTY	NOTE
3	HOOK		Fe, Cr Plated	1	ZRXXCDM002
2	Microphone	Black		1	ZMID001XXXX
1	CABLE	Black	26AWG*4Pairs+Drain+AL/MY FU JACKET LOD=5.0mm	1	ZCA00012608

DATE	DRW	App: 21.05. E. MIYOSHI	TITLE	DM-2003
CHECKED	TAKAHASHI, T		各々	
APPROVED	Y. Hatai			
SCALE	NTS	MASS 0.20 kg		
FIG.No.	E5646-G04-B	REF.No.	05-093-930G-0	

DIMENSIONS (mm)	TOLERANCE (mm)
L ≤ 50	± 1.5
50 < L ≤ 100	± 2.5
100 < L ≤ 500	± 3

TABLE 1

- NOTE
1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
 2. USE SELF-TAPPING SCREWS ST2.9X10 SUPPLIED OR EQUIVALENT TO FIX HOOK.
 3. MASS INCLUDES CURLCORD.

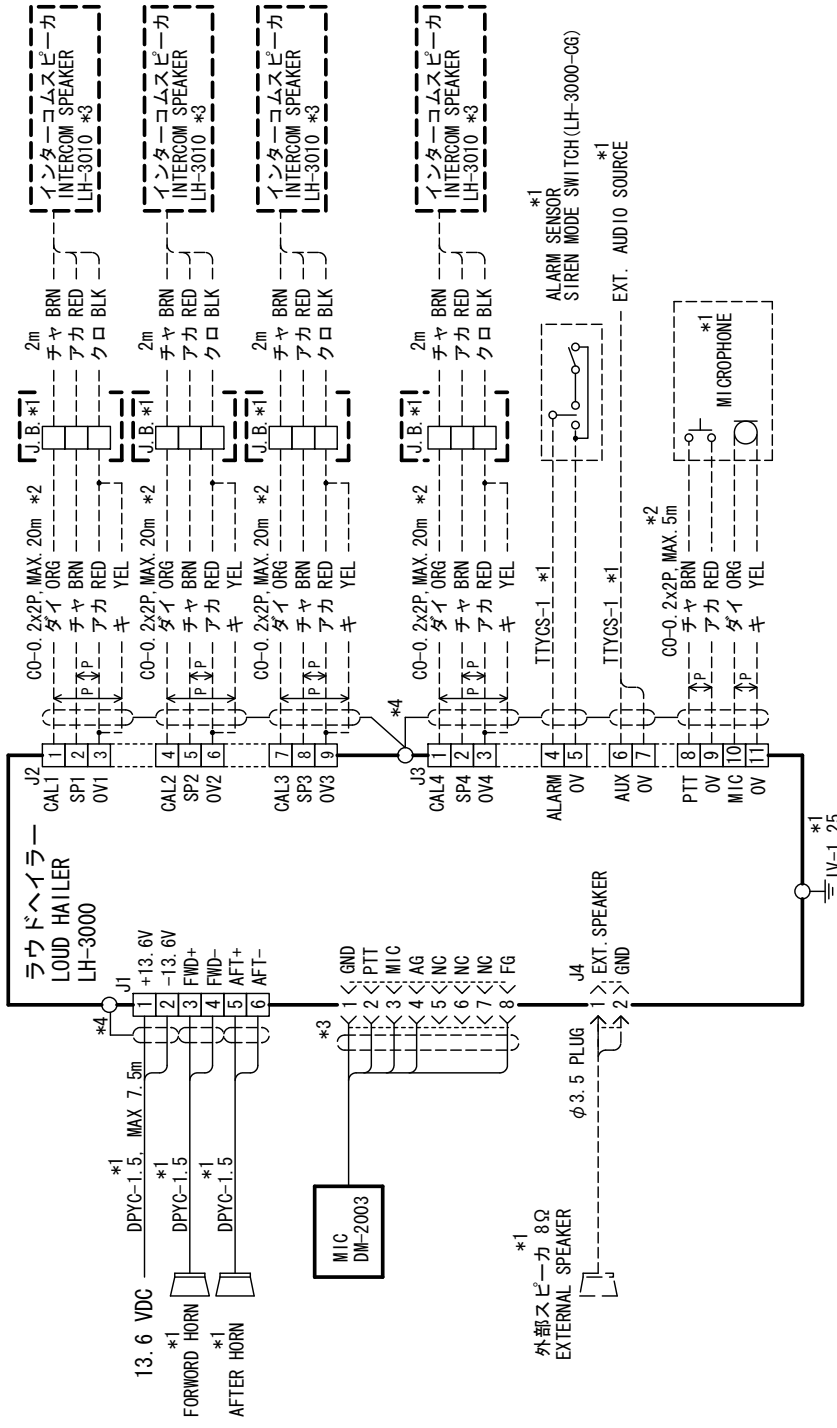

CO-0, 2x2P, MAX. 20m, φ10.5

注記

- * 1) 造船所手配。
- * 2) オプション。
- * 3) コネクタは工場にて取付済み。
- * 4) ケーブルがい装にアース線を取付け、アース端子に接続する。
このアース線は放熱板にショートさせないこと。

NOTE

- *1: SHIPYARD SUPPLY.
- *3: OPTION.
- *2: CONNECTOR PLUGS FITTED AT FACTORY.
- *4: SOLDER DRAIN WIRE TO ARMOR OF CABLE AND CONNECT TO GROUND TERMINAL.
DO NOT SHORT THE DRAIN WIRES ON THE HEAT SINK.

DRAWN	Jun. 26 '07 T. YAMASAKI	TITLE	LH-3000
CHECKED	Jun. 26 '07 T. TAKENO	名称	ラウドヘイラー
APPROVED	Jul. 3 '07 R. Esumi	相互結線図	
DWG. No.	C5646-C01- E	NAME	LOUD HAILER
		INTERCONNECTION DIAGRAM	

FURUNO Worldwide Warranty for Pleasure Boats (Except North America)

This warranty is valid for products manufactured by Furuno Electric Co. (hereafter FURUNO) and installed on a pleasure boat. Any web based purchases that are imported into other countries by anyone other than a FURUNO certified dealer may not comply with local standards. FURUNO strongly recommends against importing these products from international websites as the imported product may not work correctly and may interfere with other electronic devices. The imported product may also be in breach of the local laws and mandated technical requirements. Products imported into other countries as described previously shall not be eligible for local warranty service.

For products purchased outside of your country please contact the national distributor of Furuno products in the country where purchased.

This warranty is in addition to the customer's statutory legal rights.

1. Terms and Conditions of Warranty

FURUNO guarantees that each new FURUNO product is the result of quality materials and workmanship. The warranty is valid for a period of 2 years (24 months) from the date of the invoice, or the date of commissioning of the product by the installing certified dealer.

2. FURUNO Standard Warranty

The FURUNO standard warranty covers spare parts and labour costs associated with a warranty claim, provided that the product is returned to a FURUNO national distributor by prepaid carrier.

The FURUNO standard warranty includes:

- Repair at a FURUNO national distributor
- All spare parts for the repair
- Cost for economical shipment to customer

3. FURUNO Onboard Warranty

If the product was installed/commissioned and registered by a certified FURUNO dealer, the customer has the right to the onboard warranty.

The FURUNO onboard warranty includes

- Free shipping of the necessary parts
- Labour: Normal working hours only
- Travel time: Up to a maximum of two (2) hours
- Travel distance: Up to a maximum of one hundred and sixty (160) KM by car for the complete journey

4. Warranty Registration

For the Standard Warranty - presentation of product with serial number (8 digits serial number, 1234-5678) is sufficient. Otherwise, the invoice with serial number, name and stamp of the dealer and date of purchase is shown.

For the Onboard Warranty your FURUNO certified dealer will take care of all registrations.

5. Warranty Claims

For the Standard Warranty - simply send the defective product together with the invoice to a FURUNO national distributor. For the Onboard Warranty – contact a FURUNO national distributor or a certified dealer. Give the product's serial number and describe the problem as accurately as possible.

Warranty repairs carried out by companies/persons other than a FURUNO national distributor or a certified dealer is not covered by this warranty.

6. Warranty Limitations

When a claim is made, FURUNO has a right to choose whether to repair the product or replace it.

The FURUNO warranty is only valid if the product was correctly installed and used. Therefore, it is necessary for the customer to comply with the instructions in the handbook. Problems which result from not complying with the instruction manual are not covered by the warranty.

FURUNO is not liable for any damage caused to the vessel by using a FURUNO product.

The following are excluded from this warranty:

- a. Second-hand product
- b. Underwater unit such as transducer and hull unit
- c. Routine maintenance, alignment and calibration services.
- d. Replacement of consumable parts such as fuses, lamps, recording papers, drive belts, cables, protective covers and batteries.
- e. Magnetron and MIC with more than 1000 transmitting hours or older than 12 months, whichever comes first.
- f. Costs associated with the replacement of a transducer (e.g. Crane, docking or diver etc.).
- g. Sea trial, test and evaluation or other demonstrations.
- h. Products repaired or altered by anyone other than the FURUNO national distributor or an authorized dealer.
- i. Products on which the serial number is altered, defaced or removed.
- j. Problems resulting from an accident, negligence, misuse, improper installation, vandalism or water penetration.
- k. Damage resulting from a force majeure or other natural catastrophe or calamity.
- l. Damage from shipping or transit.
- m. Software updates, except when deemed necessary and warrantable by FURUNO.
- n. Overtime, extra labour outside of normal hours such as weekend/holiday, and travel costs above the 160 KM allowance
- o. Operator familiarization and orientation.

FURUNO Electric Company, March 1, 2011

FURUNO Warranty for North America

FURUNO U.S.A., Limited Warranty provides a twenty-four (24) months LABOR and twenty-four (24) months PARTS warranty on products from the date of installation or purchase by the original owner. Products or components that are represented as being waterproof are guaranteed to be waterproof only for, and within the limits, of the warranty period stated above. The warranty start date may not exceed eighteen (18) months from the original date of purchase by dealer from Furuno USA and applies to new equipment installed and operated in accordance with Furuno USA's published instructions.

Magnetrons and Microwave devices will be warranted for a period of 12 months from date of original equipment installation.

Furuno U.S.A., Inc. warrants each new product to be of sound material and workmanship and through its authorized dealer will exchange any parts proven to be defective in material or workmanship under normal use at no charge for a period of 24 months from the date of installation or purchase.

Furuno U.S.A., Inc., through an authorized Furuno dealer will provide labor at no cost to replace defective parts, exclusive of routine maintenance or normal adjustments, for a period of 24 months from installation date provided the work is done by Furuno U.S.A., Inc. or an AUTHORIZED Furuno dealer during normal shop hours and within a radius of 50 miles of the shop location.

A suitable proof of purchase showing date of purchase, or installation certification must be available to Furuno U.S.A., Inc., or its authorized dealer at the time of request for warranty service.

This warranty is valid for installation of products manufactured by Furuno Electric Co. (hereafter FURUNO). Any purchases from brick and mortar or web-based resellers that are imported into other countries by anyone other than a FURUNO certified dealer, agent or subsidiary may not comply with local standards. FURUNO strongly recommends against importing these products from international websites or other resellers, as the imported product may not work correctly and may interfere with other electronic devices. The imported product may also be in breach of the local laws and mandated technical requirements. Products imported into other countries, as described previously, shall not be eligible for local warranty service.

For products purchased outside of your country please contact the national distributor of Furuno products in the country where purchased.

WARRANTY REGISTRATION AND INFORMATION

To register your product for warranty, as well as see the complete warranty guidelines and limitations, please visit www.furunousa.com and click on "Support". In order to expedite repairs, warranty service on Furuno equipment is provided through its authorized dealer network. If this is not possible or practical, please contact Furuno U.S.A., Inc. to arrange warranty service.

FURUNO U.S.A., INC.
Attention: Service Coordinator
4400 N.W. Pacific Rim Boulevard
Camas, WA 98607-9408
Telephone: (360) 834-9300
FAX: (360) 834-9400

Furuno U.S.A., Inc. is proud to supply you with the highest quality in Marine Electronics. We know you had several choices when making your selection of equipment, and from everyone at Furuno we thank you. Furuno takes great pride in customer service.

EC Declaration of Conformity



We **FURUNO ELECTRIC CO., LTD.**

(Manufacturer)

9-52 Ashihara-Cho, Nishinomiya City, 662-8580, Hyogo, Japan

(Address)

declare under our sole responsibility that the product

LOUD HAILER LH-3000

(Model name, type number)

to which this declaration relates is in conformity with the following standard(s) or other normative document(s)

IEC 60945 Ed.4.0: 2002, clauses 9.2, 9.3, 10.3, 10.4, 10.5, 10.8 and 10.9

IEC 60945 Ed.3.0: 1996, clauses 9.2, 9.3, 10.2, 10.3, 10.4, 10.5, 10.8 and 10.9

(title and/or number and date of issue of the standard(s) or other normative document(s))

For assessment, see

- EMC Test Report FLI 12-04-005, February 20, 2004 prepared by Furuno Labotech International Co., Ltd.

This declaration is issued according to the Directive 2014/30/EU of the European Parliament and of the Council of 26 February 2014 on the harmonisation of the laws of the Member States relating to electromagnetic compatibility.

On behalf of Furuno Electric Co., Ltd.

Nishinomiya City, Japan
April 20, 2016

(Place and date of issue)

Yoshitaka Shogaki
Department General Manager
Quality Assurance Department

(name and signature or equivalent marking of authorized person)

ECF

(Elemental Chlorine Free)

The paper used in this manual
is elemental chlorine free.

FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved. Printed in Japan

Pub. No. OME-56460-E3

(ETMI) LH-3000

A : FEB. 2004

E3 : APR. 26, 2017



0 0 0 1 4 9 1 1 8 1 4